

Mounting of Nihola Aluminium front door

Remove the plastic front by removing all rivets by using a metal drill and a drilling machine – drilling size 3,3mm -3,5mm can be used. Remove also the 2 pc's of 6 mm bolts also. MARKED RED.




2. Mount the hinges fully with rivets and bolt before mounting the aluminum door. Drilling size 3,3mm - 3,5mm can be used. See below picture. Also mount the 6 mm bolt in the top. See below picture.

3. After hinges is mounted fully, mount the aluminum front door to the hinges by drilling and fitting the rivets. Drilling size 3,3mm -3,5mm can be used. Note the alignment carefully before drilling the holes for the rivets in the door from inside of the transport box . See below picture.



4. Finally fit the door lock by first fitting the big part of the lock and next the small hook to the door by drilling 2 holes in the aluminum door (drilling size 3,3mm -3,5mm can be used) note the one rivet is mounted from inside and one rivet from outside. Make sure the hook is mounted so the door can be tight to the frame after mounting. See the below 2 pictures.



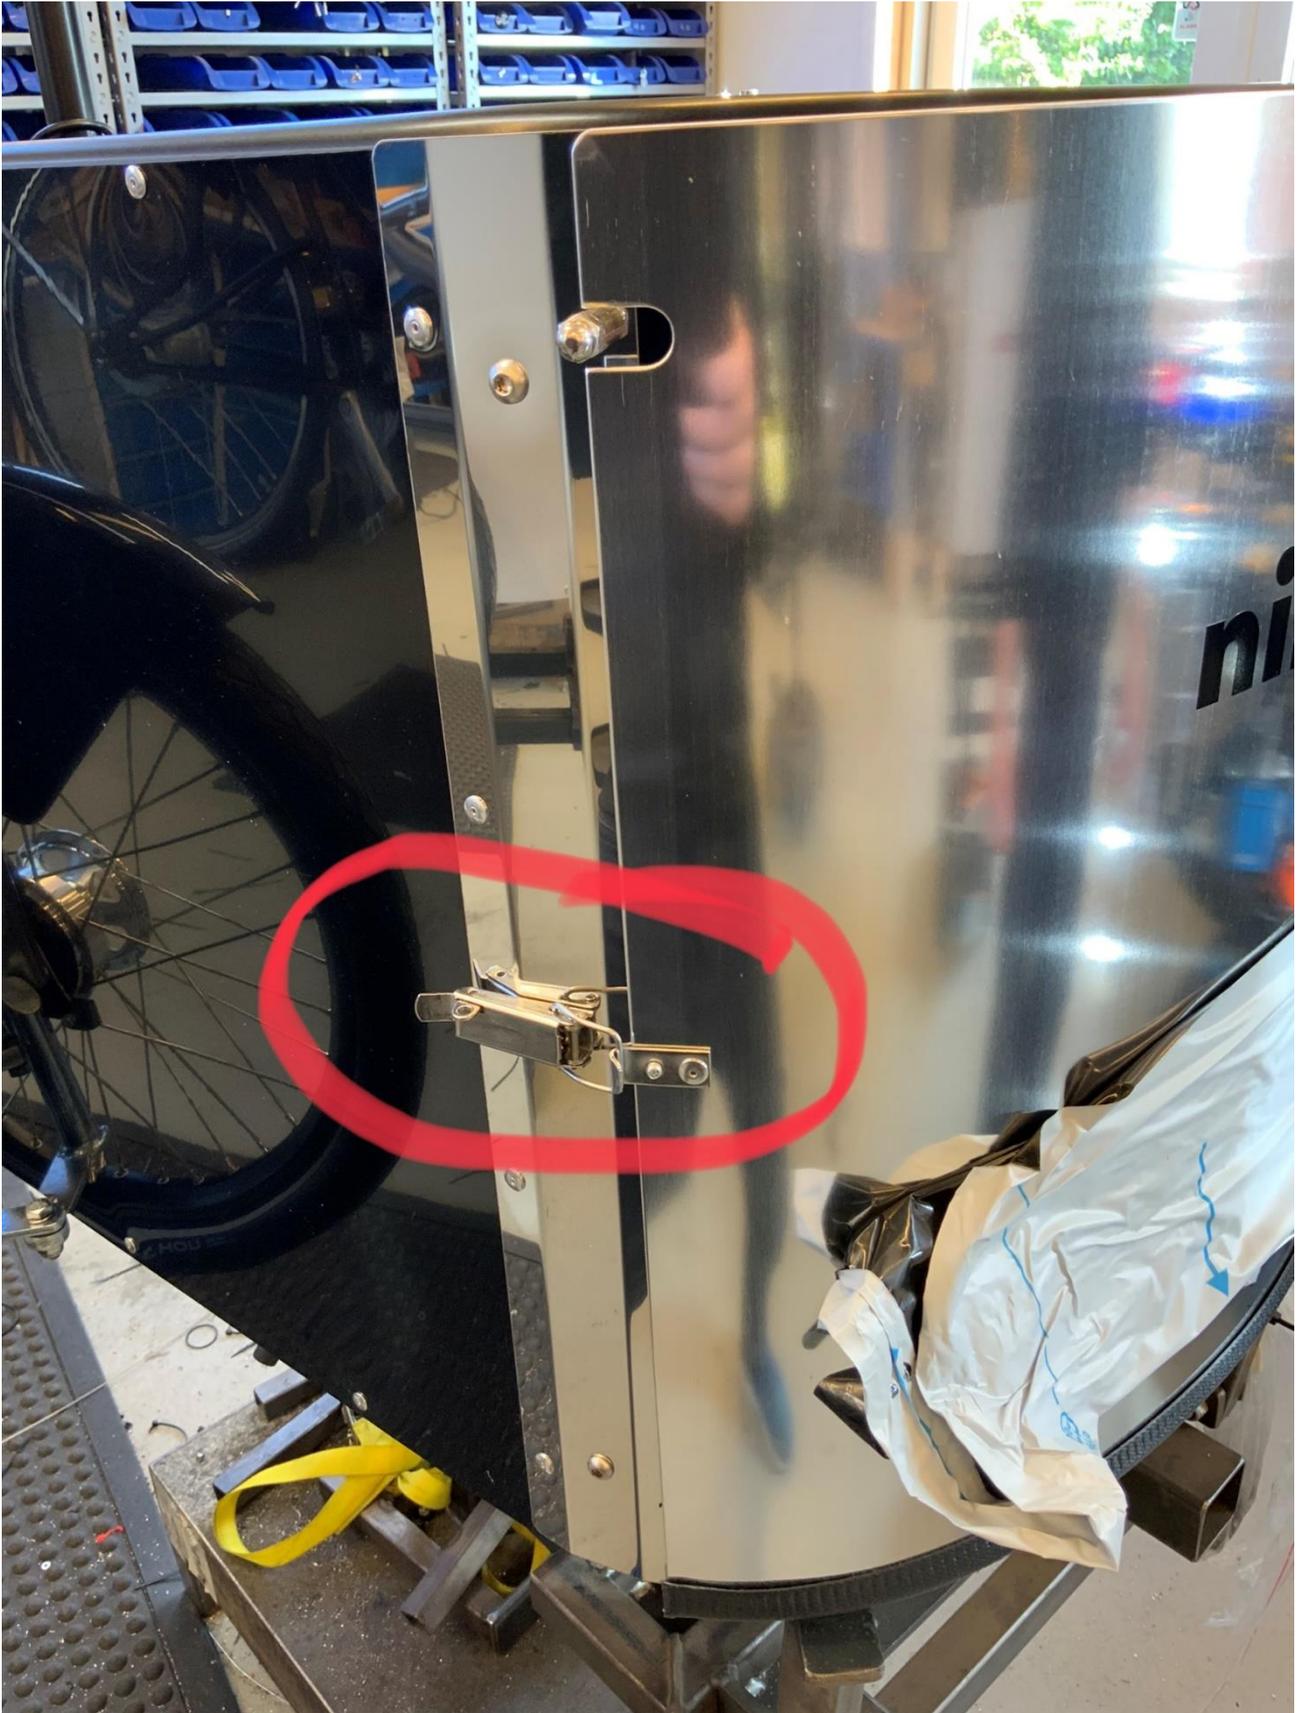

5. Final result. Please note that the old open holes from the plastic front in the top and the bottom of the frame can be closed by fitting in rivets into the frame to get it to look nicer. See 2 pictures below of the final result.



